


FRONT HOOD

GRILL




PRESSURE COOKER

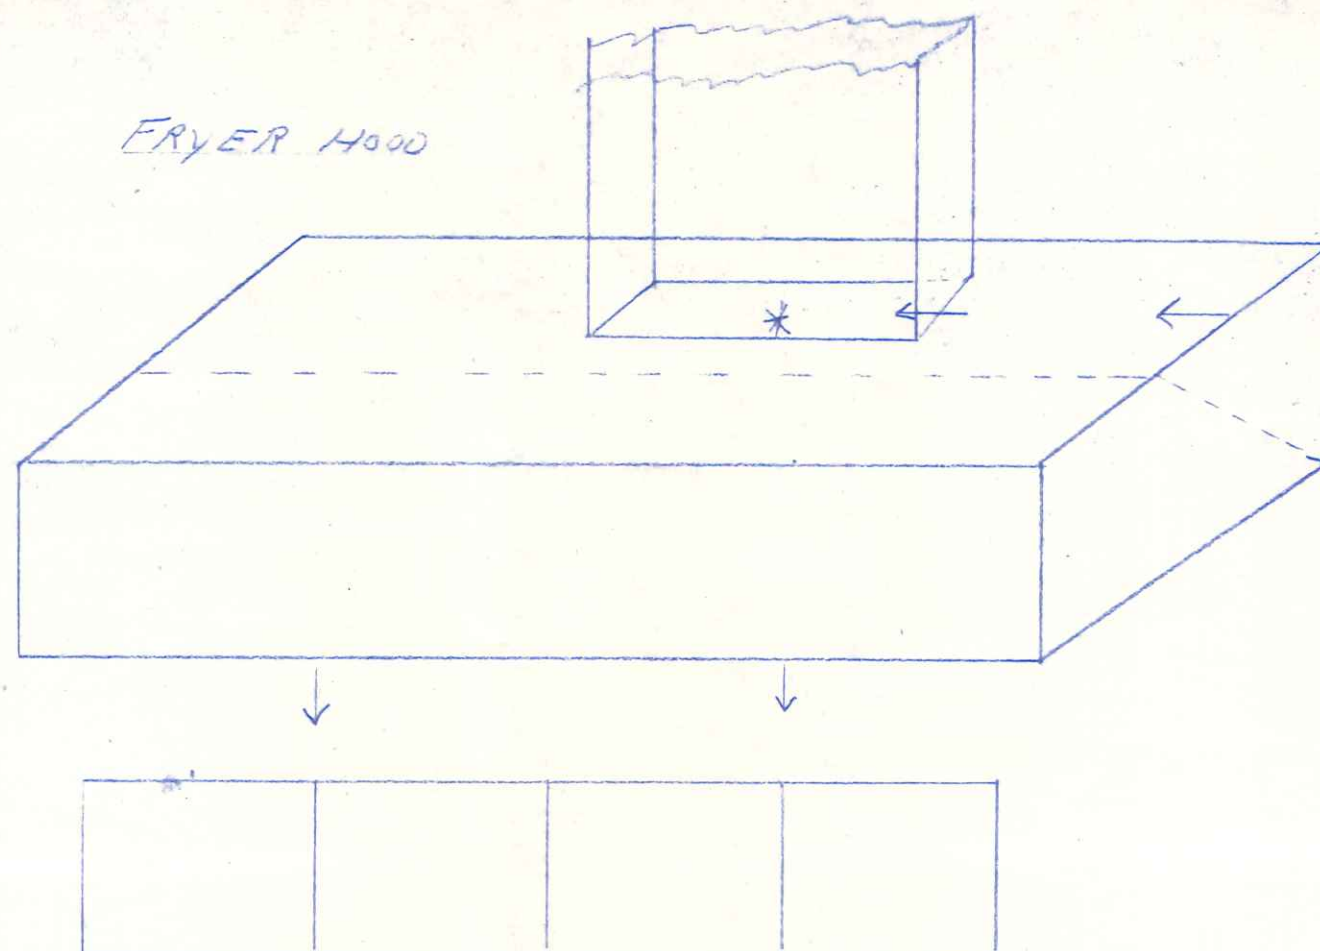

FRYER HOOD


4- FRYERS

NO SCALE

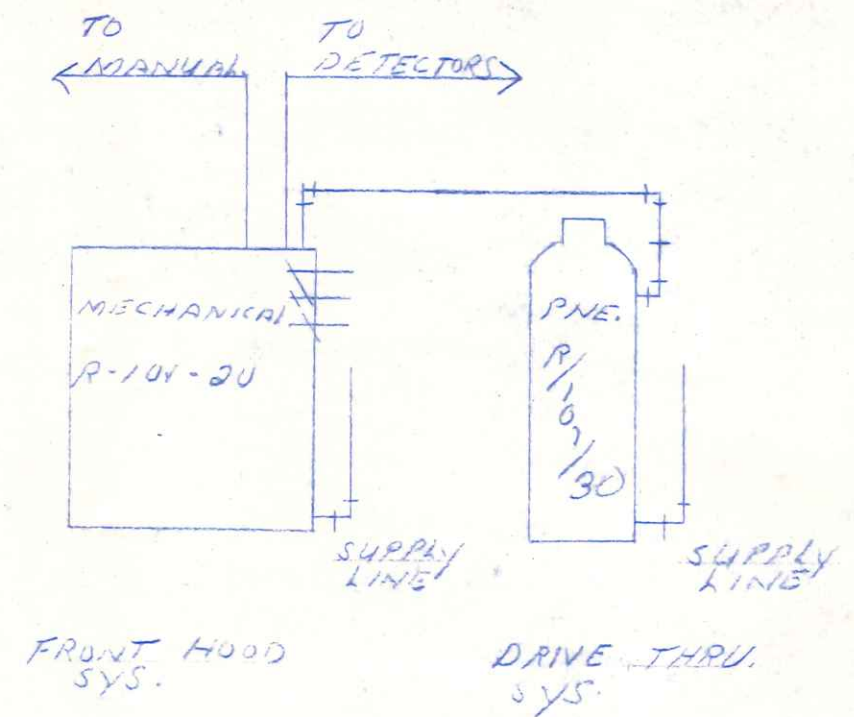


FRONT HOOD SYS.

DRIVE THRU. SYS.

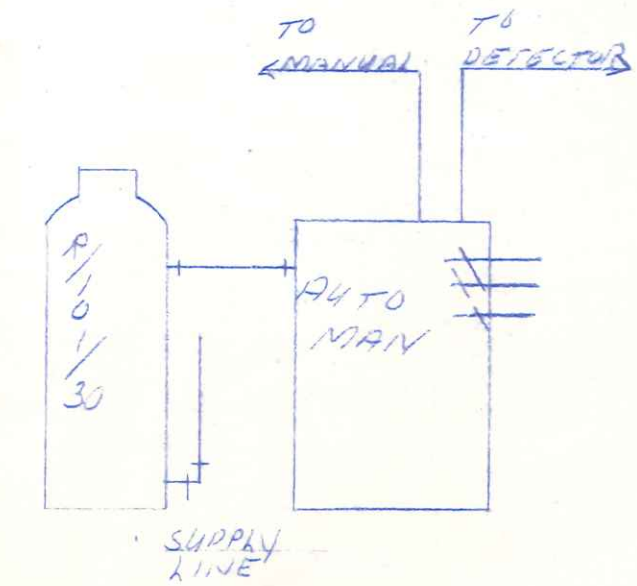


FRYER & CHILL HOOD SYSTEM

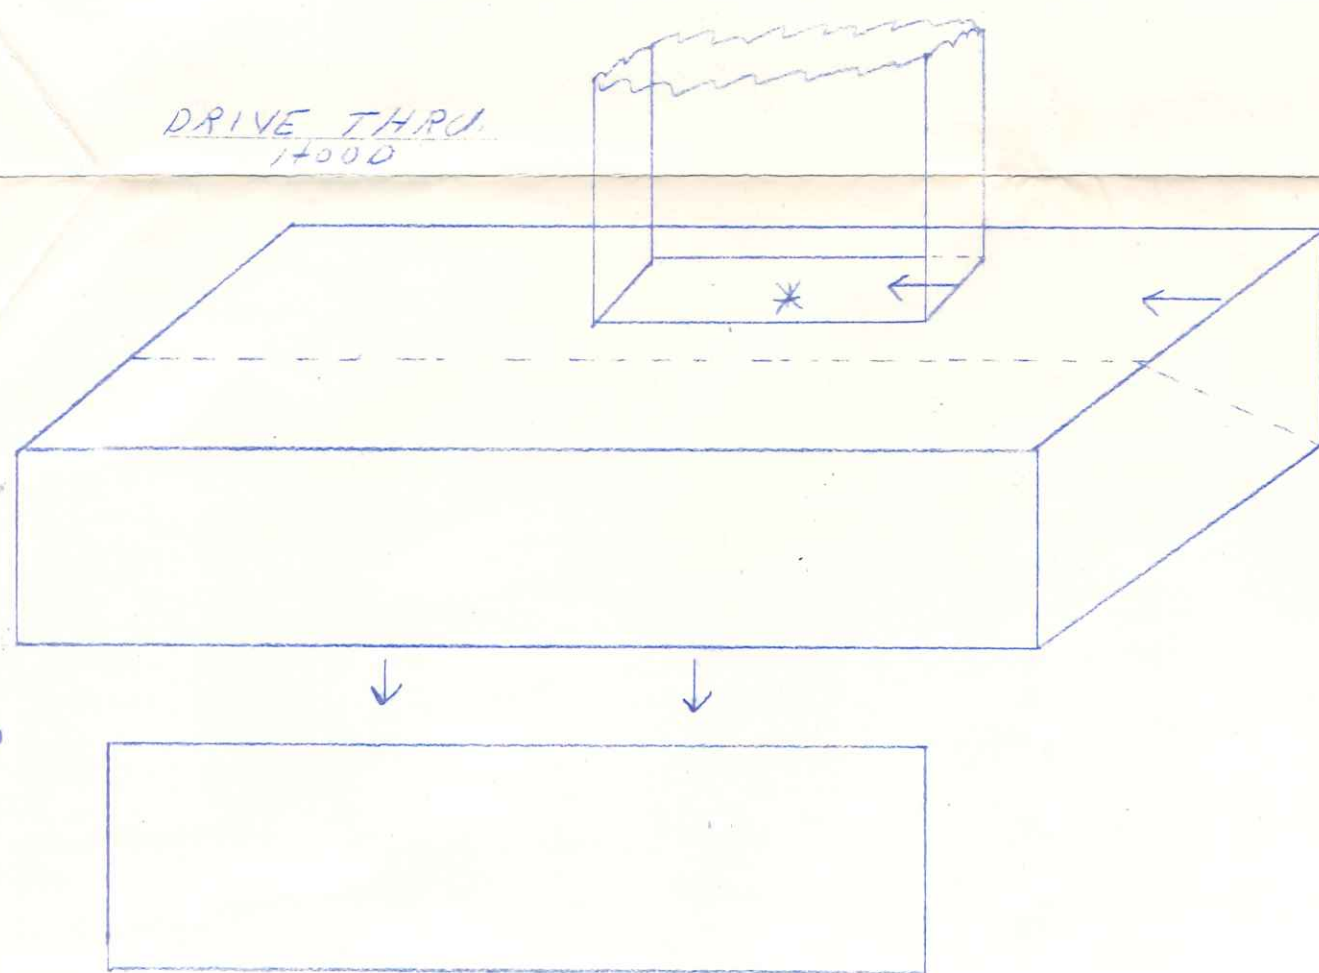

DRIVE THRU HOOD


GRILL

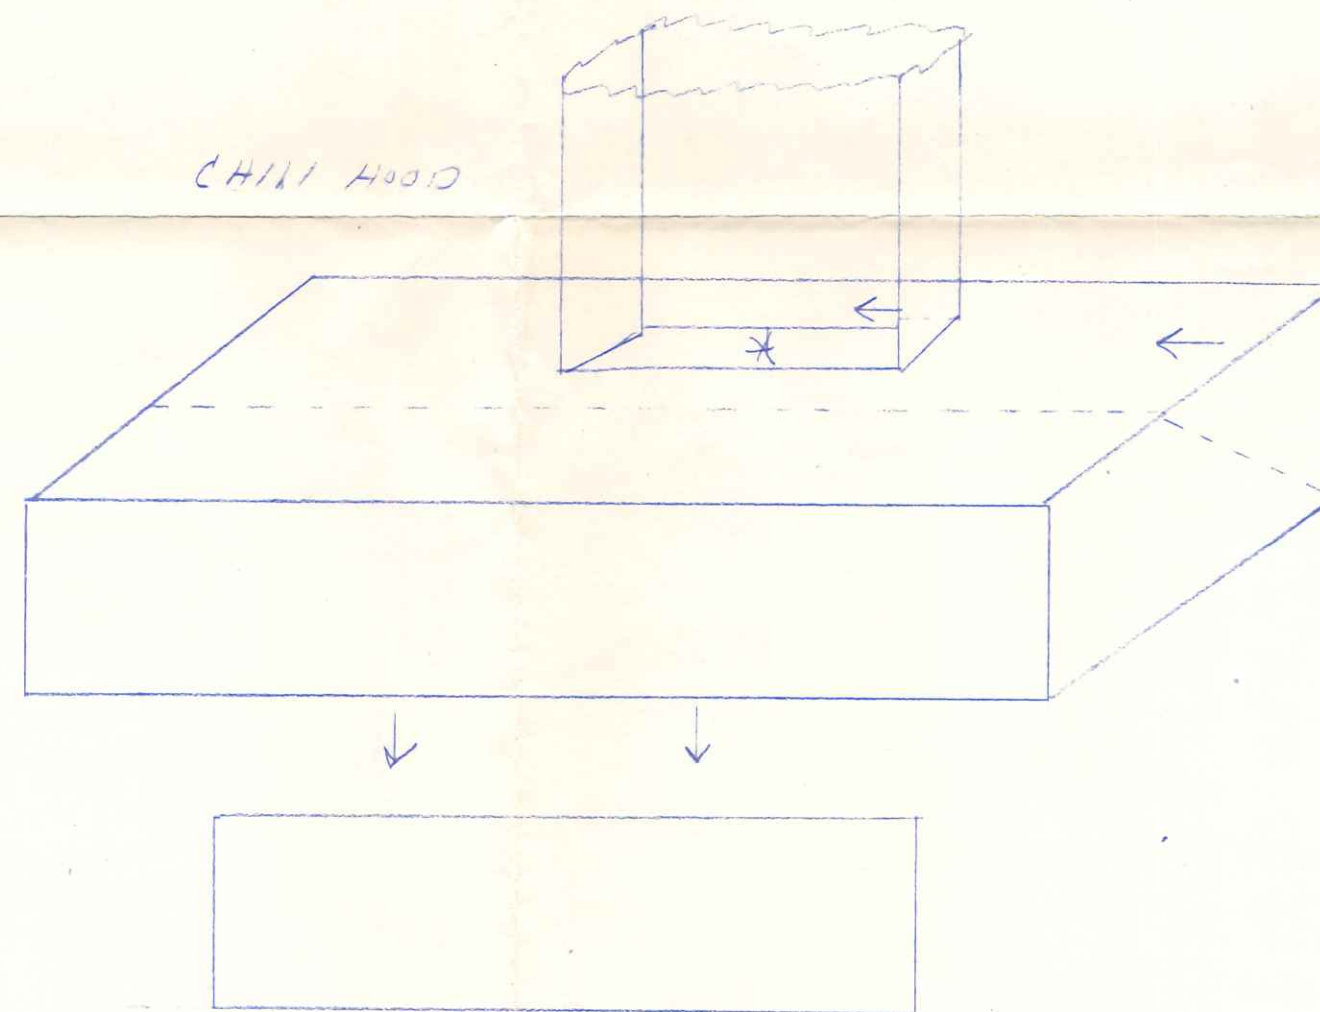

CHILL HOOD


GRILL

NO SCALE

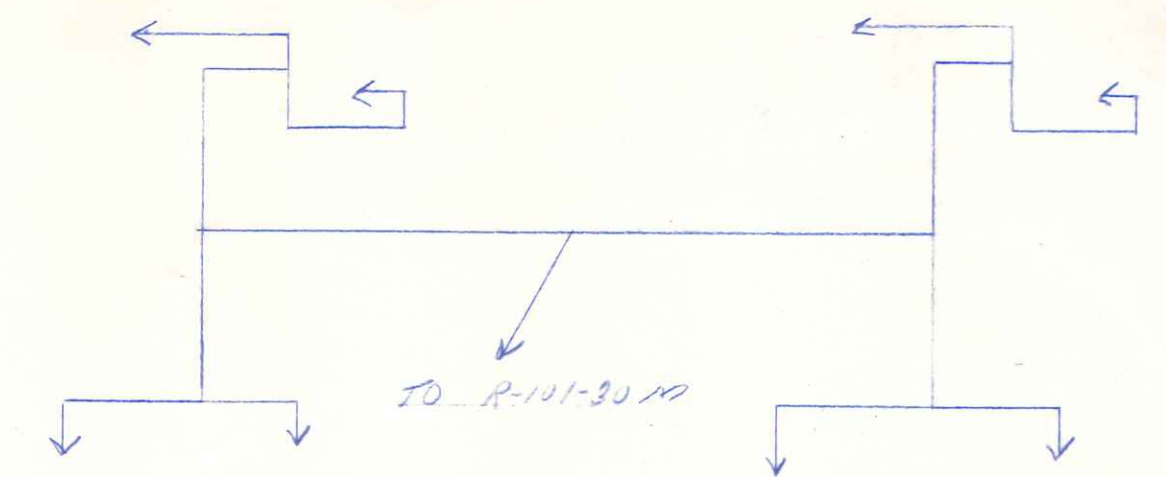


FRYER HOOD

CHILL HOOD

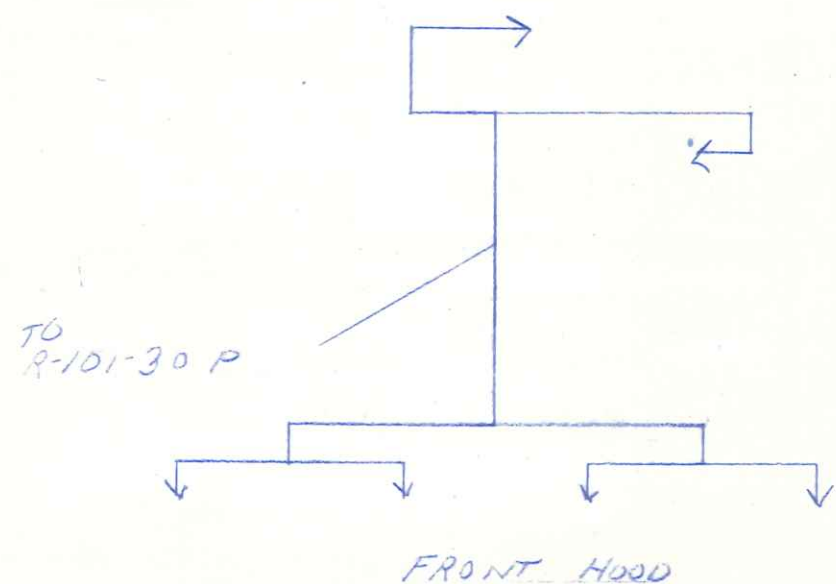

FRONT HOOD

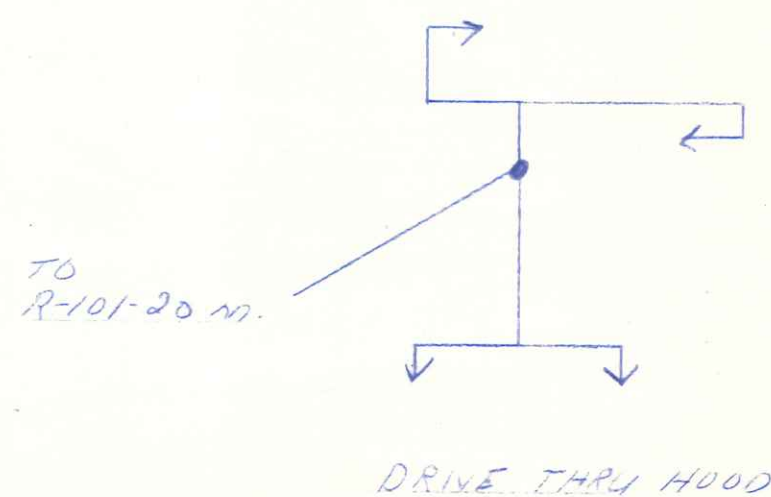

DRIVE THRU HOOD

- PARTS LIST
- 1. 1 - R-101-30-M
  - 2. 1 - R-101-20-M
  - 3. 1 - R-101-30 P
  - 4. 2-TEAM. DET.
  - 5. 2-SEA. DET.
  - 6. 1-DIST. TEE
  - 7. 20 CORNER PULLEYS
  - 8. 2 MANUAL PULLS
  - 9. 2 MICRO SWITCH
  - 10. 4 DUCT NOZZLES
  - 11. 4 -PNEUM. NOZZLES
  - 12. 10 -CYCLONE NOZZLES

1429 Scott St.

WENDY'S  
1429 SCOTT ST.  
NAPLIEON, OH.  
ANSUL FIRE SUPPRESS-  
ION SYSTEM INSTRUCTIONS

**GENERAL FIRE SALES & SERVICE, INC.**  
FIRE AND SAFETY EQUIPMENT  
707 FIRST STREET  
TOLEDO, OHIO 43605  
PHONE: (419) 693-0708