



560

Rohm

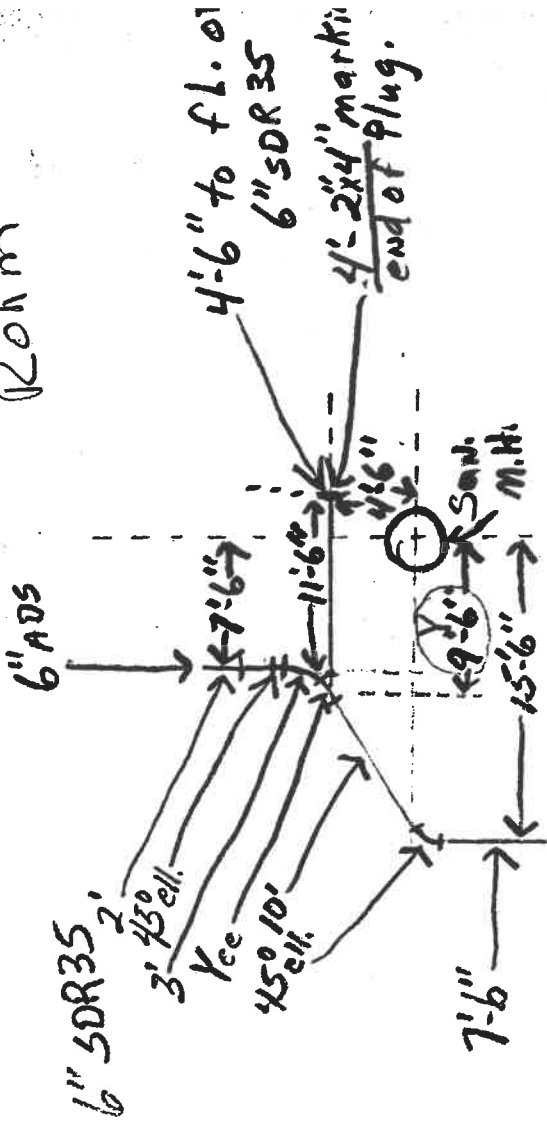

6" P.U.C.

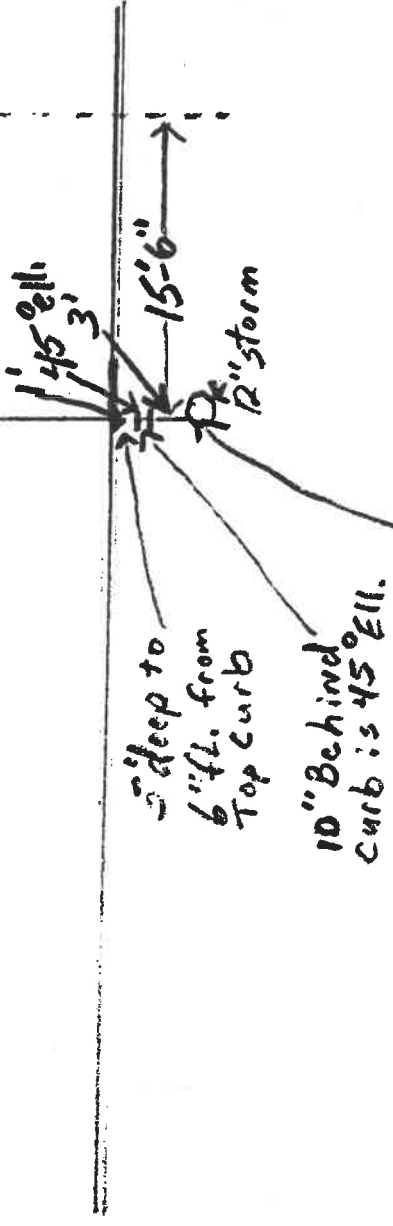


7' to top of 12" storm
3' behind curb

570 Rohm Pr

Don't
Stang


Storm 3-20-95

560
Rohm Dr.

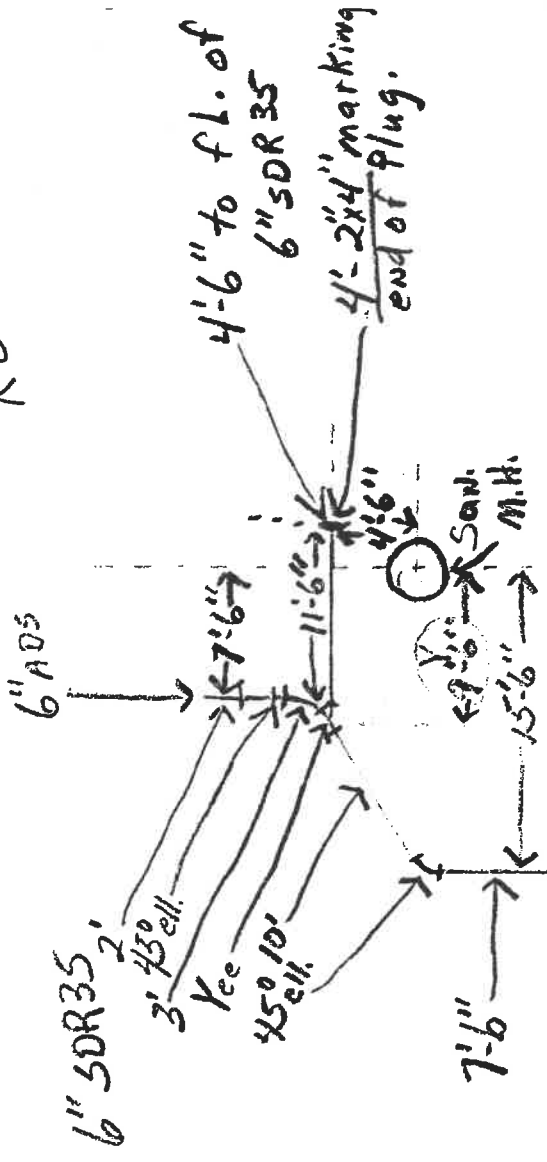

570
Rohm Dr.

Down
Stang

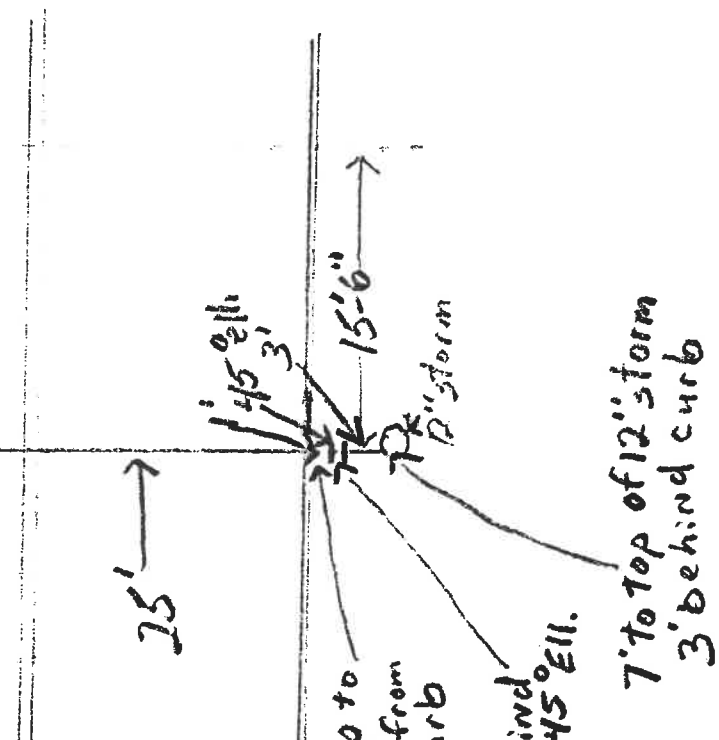

4-10-95

6" Storm installed across street by boring M. Helberg method