



TAP FOR 214 Brownell.
 Nagel install 4-13-2021
 7:00AM - 1:00PM.

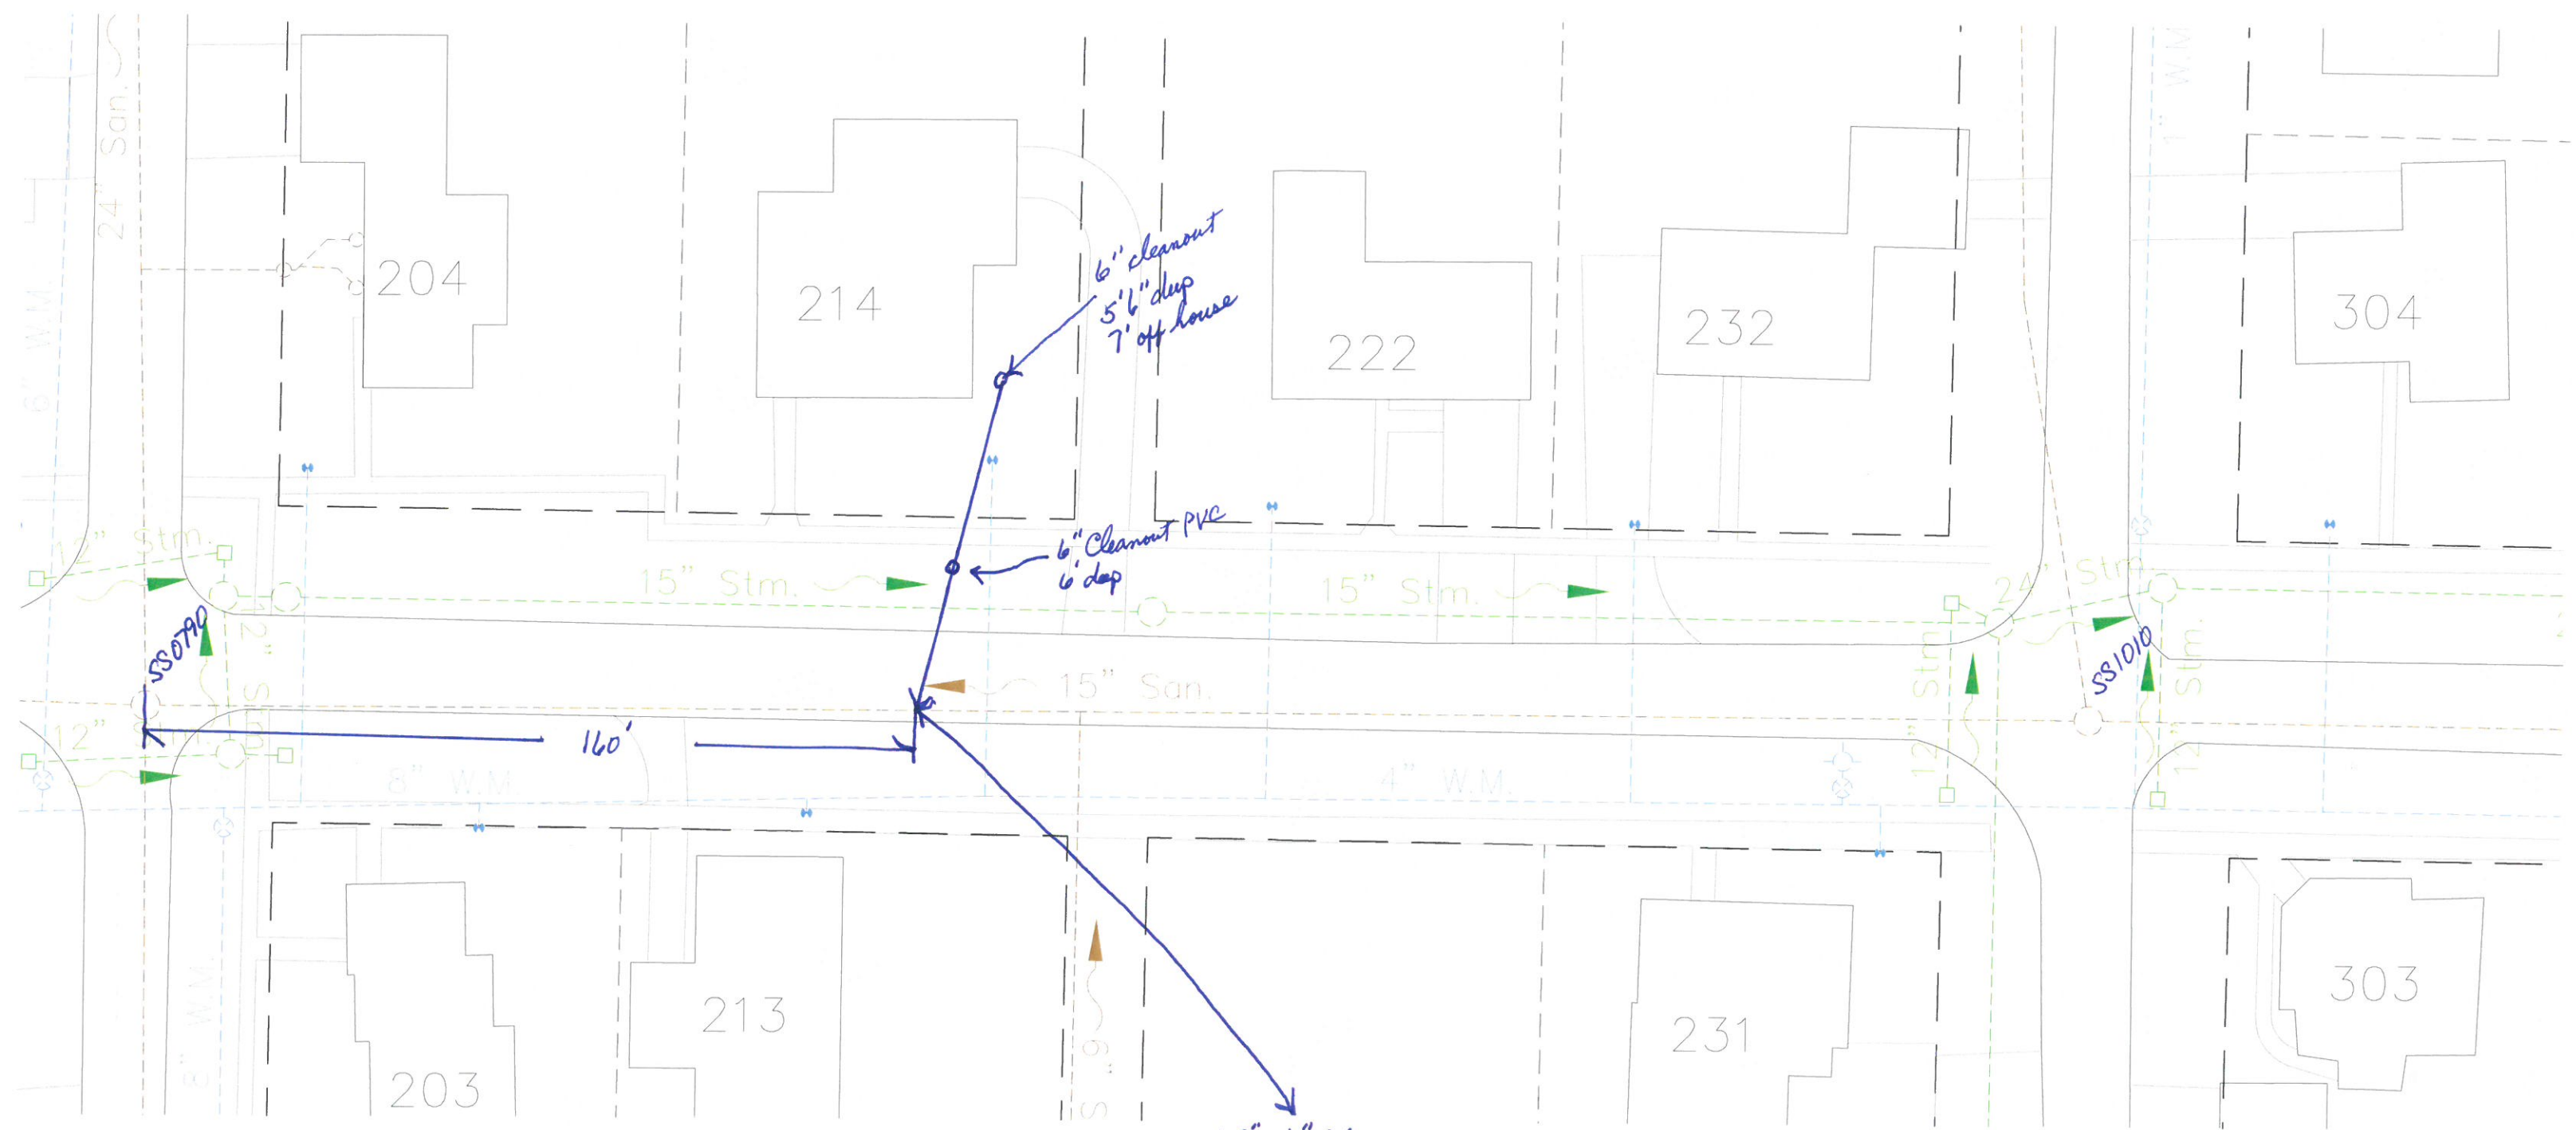

15" x 6" Wye
 2-15" VIT to SDR Fernco
 8' deep to top
 6" @ 6' deep before fittings

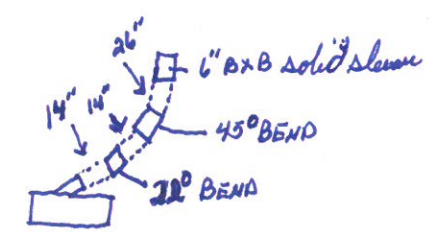

Sanitary 214 Brownell